



SETTING TIME & TIDE CLOCK

Looking from the back of clock:

1. Adjust the time hands by turning the right knob.
2. Insert the battery.
3. Set the tide hand (red) by turning the left knob.

Note: Current Local High and Low Tides are available from your community newspapers/radio or television broadcast.

When the time reaches the High/Low tide time adjust the red hands accordingly